

The Digital IO Hardware Utility is used to determine if Light-O-Rama can properly communicate with Digital IO cards installed on the PC. Light-O-Rama uses the Universal Library to communicate with digital IO cards. You must have that software installed on your machine. The DIO cards must be visible using the InstaCal program.

To get a list of boards that Light-O-Rama can find on the PC click the Refresh List button. Once a list of boards appears you can select a board to test. Once a board is selected you can test individual pins or Chase through all pins using the appropriate functions.

If you cannot control the board using the Hardware Utility then you will not be able to control the board using the Light-O-Rama Light Control Software.